

DVR




QUICK TIP CARD






EASY STEPS TO USE THE FEATURES OF YOUR DVR

HOW DO I RECORD A PROGRAM?




You can set a recording with just one touch of the remote

- While in the **Guide** , highlight the program you wish to record and press **Record** . A red dot appears in the Program Information window to indicate the program will be recorded.
- While watching live TV, simply press **Record** . A Recording Started notice appears to indicate recording has begun.

HOW DO I RECORD A SERIES?

- Highlight the TV series you want to record in the Guide and press **Record**  twice to view the Overlay screen.
- Select the **Set Up a Series Recording**  icon and specify your recording options such as the type of episode you want to record and how many episodes you want to save.
- Select **Record series with these settings.** 

HOW DO I WATCH A RECORDING?

- Press **LIST**  to view a list of your recorded programs.
- Highlight a program and press **OK/Select** . Select the **Play**  icon.

HOW DO I VIEW A LIST OF PROGRAMS SCHEDULED TO RECORD?





- Select **DVR**  from the **Quick Menu**.
- Select **Future Recordings**.

HOW DO I PAUSE, REWIND AND INSTANTLY REPLAY LIVE TV?

- Press **Pause** , **Rewind**  or **Instant Replay**  on the remote.




HOW DO I PLAY IN SLOW MOTION?

- Press **Pause** , then press **Fast-Forward**  to view slow motion in forward mode.
- Or press **Pause** , then **Rewind**  to view slow motion in reverse mode.


HOW DO I RETURN TO LIVE TV?

- Press **Live**  on your remote.


HOW DO I CONTROL TWO PROGRAMS AT ONCE?

- Use the **Swap**  to toggle back and forth between two programs. This allows you to pause, rewind and fast-forward both programs.

HOW DO I START A RECORDING EARLY OR EXTEND THE END TIME?

- Select a program from your list of **Future Recordings**.
- Select program and select **Set or Cancel Recordings**. 
- Select **Modify Recording Settings**.
- Arrow down to adjust the start and end times.

HOW DO I MODIFY MY SERIES PRIORITY LIST?

- Select **DVR**  from the **Quick Menu**.
- Choose **Series Recordings**.
- Select **Series Priority List**.
- Highlight a listing and use **Page +/-**  to modify the priorities.

IMPORTANT NOTES ABOUT YOUR DVR

- DVR is set to save programs until "Space is Needed." You can change the delete priority to "I Delete" for all programs for individual programs.
- You can easily determine how much disk space is available by accessing DVR Recordings. The percentage displayed above the listings indicates how much disk space is occupied.
- Parental Locks will not prevent a program from recording. However, the audio is muted and no video appears while it records.
- You can record music channels. However, the playback controls are not functional for recorded music