


# USASStream USER GUIDE

## ROKU DEVICES

9/2022

**Dennis the Menace**  
9:00-9:30 TV G

Dennis and Tommy are desperate enough to purchase fins for swimming that they make a foolish attempt to go around door-to-door to the houses of their neighborhood and request funds for Valentine's Day cards in the midst of July.



	Wed 9:00 AM	8:30 AM	9:00 AM	9:30 AM	10:00 AM
185	WILD	Backs Against the Wall. The Howard ...	Chaplains		
186	create	Ask This Old Hou...	Classic Woodwor...	Garden Smart	Make48
187	KDLT	<b>Dennis the Menace</b> Miss Cathcart's Suns...	Dennis the Menace Out of Retirement	Hazel Hazel Needs a Car	Hazel Hazel Sits It Out
606	KDLT	<b>New</b> Today 3rd Hour		Today with Hoda & Jenna	
608	Tiger's Nest	Daniel Tiger's Nei...	Daniel Tiger's Nei...	Ready Jet Go!	Pinkalicious & Pe...
609	10TV	Lauren Lake's Pa...	Lauren Lake's Pa...	Personal Injury C...	Couples Court wi...

## ADDING THE (USA Stream) TO YOUR ROKU

(Account must be established at Roku.com before proceeding)

On your device home screen, press the arrow to your right and scroll down until you see "Add Channels" select and then to search channels type in USA Stream (not case sensitive but space is required) arrow over and select, the app will load The first time you open the channel you will be prompted for a Login and Passphrase, if you have not received this please contact our office.



### How to Use Your Remote

Pressing the Up, Down, Left, and Right arrows will highlight different actions in the Guide, Search, Recording, and Account options. Pressing OK on the remote will open the highlighted item. Press the Back button that is to the left of the Home button to move back to the previous screen or to open the Tab Bar.



### Watching USA Stream TV

From Home Screen, use the remote, to highlight the USA Communications app and press OK on your remote, this will open your on-screen Program Guide. To watch a channel, press the Up or Down arrows on the remote to any highlighted program and press the Play/Pause button to view the program.

### Channel Surfing


While watching a currently airing program, press the Up or Down arrow of the remote to view the next higher or lower numbered channel.

## Upcoming Recordings

Use the Upcoming Recordings feature to manage settings for your future recordings. From the Recordings screen, press the Down arrow of your remote control, highlight Upcoming, and press OK to see a list of programs you have scheduled for recording. Scroll through the list to highlight an Upcoming Recording and then press OK on your remote to open a program that you want to manage.

To assure that you don't miss the beginning or the end of a program, you can change the Start/Stop Recording times by highlighting the Edit button and pressing OK on your Remote to open a screen that gives you options on when you would like to Start and Stop a recording.

Highlight the Start Time option and press OK on your remote, then scroll up or down to choose the new Start Recording time, and then press OK on your remote to finish your selection. The Stop Recording functions the same way as the Start Recording feature and is beneficial when watching sporting events where you want to extend the Record time.

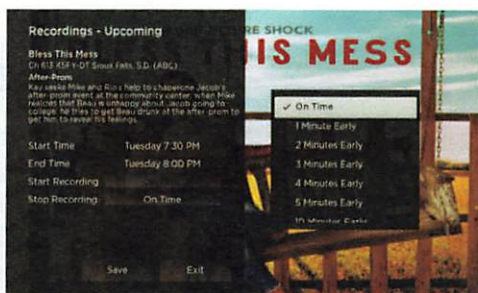

Press OK on your remote to scroll and choose a maximum number of episodes that you want to keep of this series, or you can choose to keep All Episodes, press OK to make your selection.

Once you have finished your changes, highlight Save and press OK on your remote to save the changes. To Delete an Upcoming Recording, press the Right arrow on your remote, highlight De-lete, and press OK. You will receive a prompt to confirm deletion of the program.

## Rules

Use the Rules feature to manage the episodes of a series that you want recorded automatically. From the Recordings screen, press the Down arrow of your remote control, highlight Rules, and press OK to see a list of your series programs. Scroll through the list and highlight a series that you want to manage, press OK on your remote to open a series, at this point a Recordings - Rules screen will open. Highlight the option next to Keep at Most and



Highlight the option next to Show Type and press OK on your remote and choose to keep All or Only New episodes of a series, press OK to make your selection.

You can also choose to set the Start and Stop Recording times for all episodes in this series. This option works the same way as it does in Upcoming Recordings section. Once you have finished your changes, highlight Save and press OK on your remote control.

## Program Search Feature

You can use the Search feature to find Live and Future programs. Go to Search in the Tab Bar, from here you can type in the name of a program by typing in the first few letters of a program. The results will be more specific if you type in more letters in the name of the program.

Highlight a program and press OK on your remote, if it is a currently airing program you can highlight Watch and press OK on your remote to view it. You also have the option to select Record for adding this program to your future recordings. See the Recording Your Programs section of this guide for more information.



## Account Option - Add a New Device to USAStream

Before you add a new device to this service, go to Account in your Tab Bar from an activated device, and use the Down arrow on the remote to scroll down, and highlight Add Device. Click OK on your remote to generate a Login and Passphrase for the new device. Follow the directions at the beginning of this guide for adding this service to your new Roku, and use the displayed Login and Passphrase when you are prompted to activate this service.



## On-Screen Guide Management

From a live program that you are watching, press the Back button on your remote to open the on-screen Program Guide. Use the Up or Down arrows on your remote to scroll through the programs in the Guide, press OK on a highlighted program to see detailed program information and your management options. The three options include Watch, for a currently airing program, Record, and Search.

To Watch, use your remote to highlight the Watch button and press OK on your remote. To Record a program, highlight the record button and press OK on your remote. See the Record section of this guide to learn more about recording programs. Choose the Search feature if you want to see future dates and times that this program will air that you may want to record. See the Search section of this guide to learn more about Search options.

## Tab Bar

From the Program Guide, press the back button on your remote to open the Tab Bar. The Tab Bar allows you to scroll Left or Right to access the Guide, Search, Recordings, and Account options.


Time	3:00 PM	3:30 PM	4:00 PM	4:30 PM
187	Diff'rent Strokes	Diff'rent Strokes	Gimme a Break!	Gimme a Break!
511	The Dr. Oz Show		Dr. Phil	New
513	The Kelly Clarkson Show		The Ellen DeGeneres Show	
606	Judge Judy	Judge Judy	Dakota News Now @ 4PM	New
608	Molly of Denali: Berry Itchy Day: Herr...	Xavier Riddle and ... I am Mary Shelley, I a...	Odd Squad: Mid-Day in the Garde...	Cyberchase
609	The Real		25 Words or ...	25 Words or Less
611	The Dr. Oz Show		Dr. Phil	New



## Restart TV

This popular feature lets you go back to the beginning of any currently airing program that has the Restart Option.

While you are watching a program that you want to Restart, press on the Right Arrow of your Roku remote which will open a Video Options screen. Choose Restart this program and press OK to Restart the program back to its beginning.

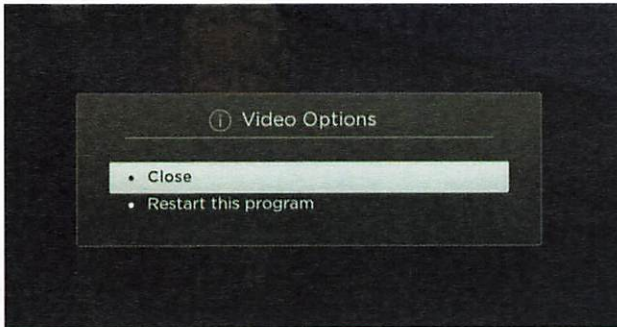

Programs that have the Restart option will display the Green Restart icon in the Program description of the Guide.

There may be programs, because of programming restrictions, that don't allow for the Restart function. Please contact our office if you have questions regarding this.

## Quick Guide

While you are watching a program, you can press the Left Arrow of your Roku remote, which will display a Quick Guide showing the last eight channels that you have watched on the left side of your TV screen.

Use the up and down arrows on your Roku remote to scroll through your previously watched channels and press OK on a highlighted channel to switch to that channel.

